



# CLEANING AND MAINTENANCE GUIDELINES



**SUPERIOR™**  
PLASTIC PRODUCTS



260 JALYN DRIVE, NEW HOLLAND, PA 17557 TF: 717-355-7100 | FX: 717-355-7129  
SUPERIORPLASTICPRODUCTS.COM

## THANK YOU FOR CHOOSING SUPERIOR PLASTIC PRODUCTS!

In this document you'll find manufacturer's guidelines for keeping your Superior vinyl clean and well maintained. Vinyl is designed to be a low-maintenance material, so with periodic cleaning, your system will retain its beauty and functionality for many years.

If you've chosen Superior's 400 Series with cable infill, you may notice that the cable tension can loosen over time. This is easy to address with a few simple tools, and you'll find the instructions for how to do so in the Re-Tensioning Your Cable section of this document.

## VINYL CLEANING GUIDELINES

General vinyl cleaning can be done using soap and water or a mild household detergent that is approved for use on plastics or vinyl. All-purpose citrus-based cleaners and degreasers also work well. Be sure to use a soft non-abrasive cloth.

If using a pressure washer, make certain it is set to the manufacturer's recommended setting for vinyl to avoid damage. (Always read the pressure washer manufacturer's instructions.)

### Persistent Stains

Some stains or marks—such as rubber marks, permanent markers, paint, oil, tar, nail polish, or gum—will persist after washing. Another persistent mark that often concerns homeowners is artillery fungus, also known as shotgun mold. This surface-only fungus appears as a series of small black dots and is known to be spread by landscape mulch.

When dealing with these persistent stains and marks, do not resort to an abrasive cloth, pad, or cleaner that could scratch the vinyl. The best solution for persistent stains is to use a melamine foam cleaning pad such as the Mr. Clean® Magic Eraser® or Scotch-Brite® Easy Eraser. Only apply as much pressure as is needed to remove the stain, particularly on new vinyl, because excessive rubbing will remove the vinyl's sheen. If a melamine foam pad does not remove the stain or mark, use a tough spot remover product that is approved for use on outdoor vinyl, such as Goof Off™.

### Restoring Dull Spots

After cleaning vinyl, you may find dull spots where some of the gloss has been rubbed off. To restore these dull spots, try wiping with a clean damp cloth. If dull spots still show, dry the surface and apply a non-abrasive outdoor paste wax such as Armor All® Paste Wax or Johnson® Paste Wax to renew the gloss. Other options include outdoor house wax, automotive wax, or plastic boat polish.

**NEVER use an abrasive cloth or abrasive cleanser to clean your vinyl.** Follow the cleaning product manufacturer's instructions. We recommend testing any cleanser or stain remover in an inconspicuous spot before using widely.




## STAINLESS STEEL CABLE CLEANING GUIDELINES

These guidelines apply to stainless steel cable infill used with Superior's 400 Series vinyl railing.

Stainless steel is a corrosion-resistant material because of the protective chromium oxide film on its surface. Regular maintenance is required to keep its luster and durability. Without proper maintenance you are likely to see slight rusting or staining, especially in coastal areas. Fortunately, these small rust spots and discolorations are easy to remove.




For maintenance and stain removal: clean the cable with a rust and stain remover. We recommend **Boeshield's Rust Free® Rust and Stain Remover**. Do not use mineral acids or bleaches. Once clean you may then apply a thin coating of **Boeshield T-9® Waterproof Rust & Corrosion Protection**. Both Rust Free® and T-9® are available through your dealer.

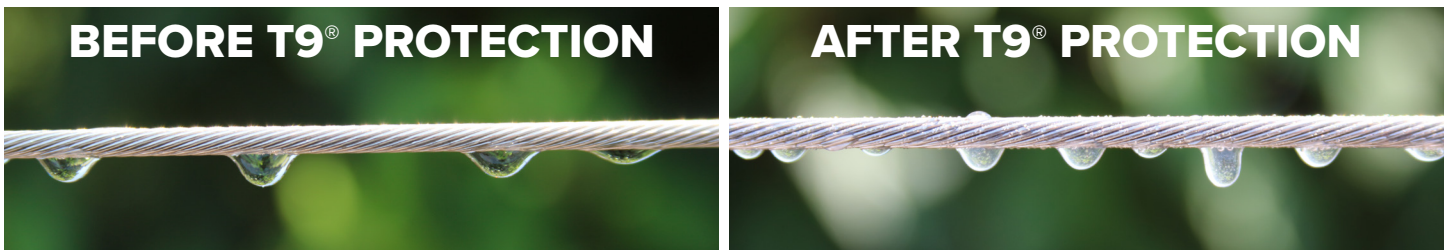

Do not use sandpaper, steel wool, or ScotchBrite® pads to polish cable or cable fittings, as anything abrasive will take the sheen off of the metal. Cloths or non-abrasive sponges work well in combination with cleaners listed above.

Outside of coastal regions, cable railing should be cleaned twice per year. We suggest spring cleaning before deck season begins and fall cleaning when the season ends.


If you are within one mile of saltwater, cleaning should be done at least four times per year or as needed. Neglecting regular cleaning can result in discoloration, corrosion, and potentially void your warranty.

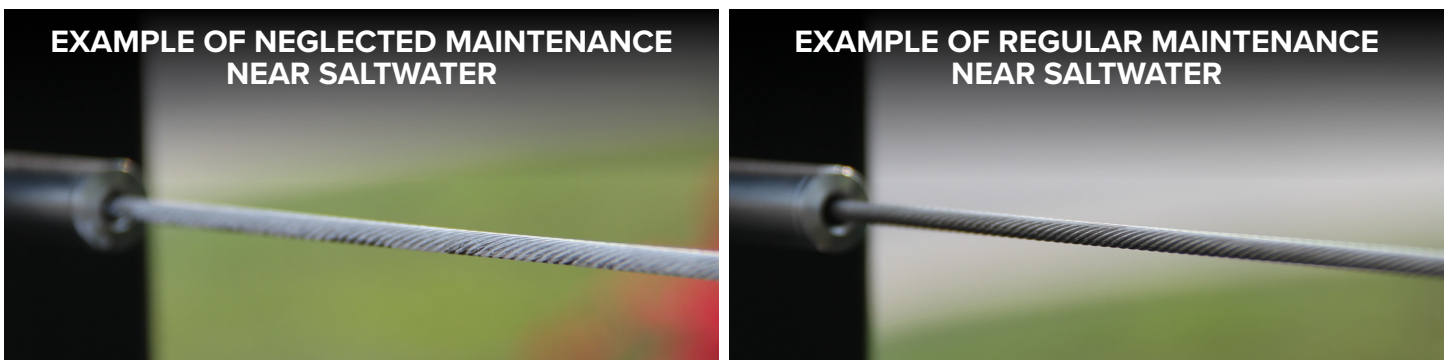

## RE-TENSIONING YOUR CABLE

Over time, cable infill may lose some tension. This is not a defect in the product, simply a result of human interference, temperature changes, or other factors. Fortunately, the cable is simple to re-tension. We recommend a tension gauge, available from your local dealer, to assist in finding the proper tension. If you do not have a tension gauge, you risk over tensioning your cable and damaging the integrity of the system.

We also recommend our gripping pliers to hold the cable in place while tensioning. If the cable spins, it may not tension correctly. The specially engineered head on the pliers holds the cable in place for tensioning without crushing or damaging the strands. If you don't have these pliers, you may hold the cable in place with traditional pliers, but place a clean rag between the pliers and cable to protect it.

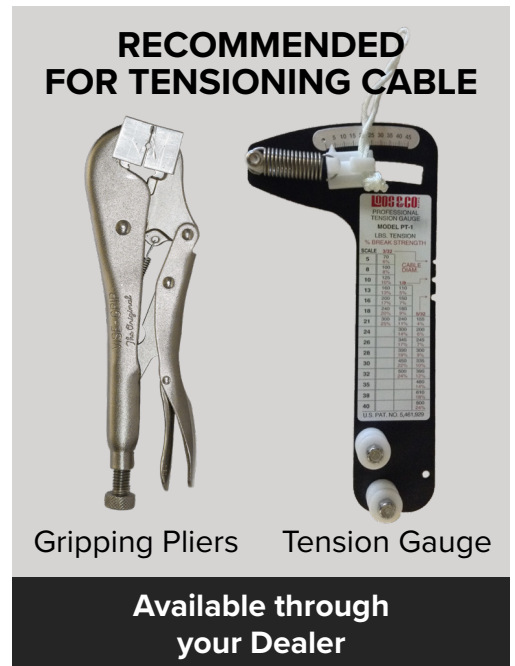

## CABLE FITTINGS TENSIONING

Use a 7/16" wrench to re-tension cable that is secured with external cable fittings. Maximum tension for this cable is 100-150 lbs. If you don't have a tension gauge to measure this, note that cable should still be able to move in all directions and return to position.



[Click Here](#) or scan the QR code to find videos of cleaning railing and cable, as well as re-tensioning cable.



To register your warranty, make a warranty claim, or find additional resources, please [Click Here](#) or scan the QR code.



[superiorplasticproducts.com](https://www.superiorplasticproducts.com)  
260 Jalyn Drive, New Holland, PA 17557  
Toll Free: 1-800-633-7093

© 2023 Superior Plastic Products | SPP230726